

PRÉSENTATION DE L'ADAPTATEUR DU SYSTÈME DE MONTAGE SPY HIGH ®

Ce système de montage a été conçu pour aider les chasseurs, les amateurs de plein air et les intérêts de sécurité à faible technologie à capturer de superbes photos ou vidéos en utilisant les pièces de haute qualité disponibles. Ce système a été inventé pour faciliter les méthodes fastidieuses et potentiellement dangereuses d'installation de caméras à l'ancienne. Plus d'escalade et de devinettes! Aide à empêcher les animaux de voir et / ou d'endommager les caméras et de ruiner vos photos! Et aide à prévenir le vol de caméras contre les.



Nous savons tous à quel point les caméras de surveillance peuvent être coûteuses - sans parler du coût supplémentaire des boîtes à verrous, qui peuvent être volées - tout comme votre appareil photo!

La surveillance de la propriété est une préoccupation énorme pour les propriétaires, les cabines, les entreprises, etc. L'utilisation d'une caméra de sentier par rapport à un système de sécurité à la maison coûteux est un excellent moyen de surveiller et de protéger votre propriété.

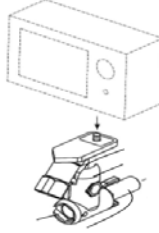
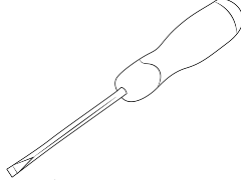

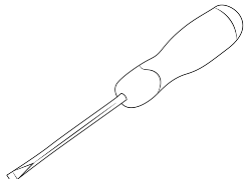

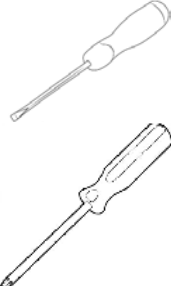
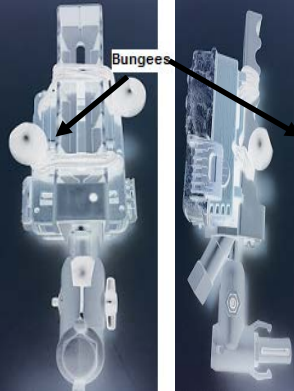
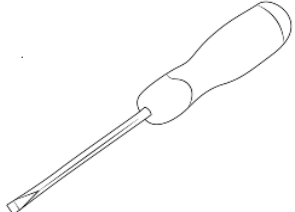
Nous sommes ravis d'offrir l'ensemble adaptateur de système de montage Spy High™ à tous! Il s'attachera à la plupart des poteaux d'extension, aux poteaux de peintre et aux balais. Nous accueillons toutes les images et/ou vidéos que vous obtenez en utilisant votre Spy High® sur notre site Web: spyhighmounts.com

Avant d'essayer d'installer le système de montage pour la première fois, nous vous suggérons de vous exercer à la hauteur des yeux ou légèrement au-dessus pour assurer un positionnement et une maîtrise corrects. Des vidéos en ligne sont disponibles pour voir à quel point cet ensemble d'adaptateurs de système de montage est rapide et facile.

CONTENU DANS L'ENSEMBLE D'ADAPTATEUR (CAMERA NON INCLUSE)

<p>(1) Pièce d'adaptateur</p>	 <p>Cet adaptateur de poteau s'attachera à n'importe quel poteau d'extension fileté, poteau de peintre, manche à balai, etc., et s'attachera à tous les autres accessoires Spy High®, y compris le support laser et la lame de scie.</p>
<p>(1) Plate-forme de montage de caméra</p>	 <p>Pour de meilleurs résultats, les caméras de piste doivent être montées sur des plates-formes de caméras dans le confort de votre camp ou magasin.</p>
<p>(1) Attachement d'arbre</p>	 <p>Attaché à un arbre ou une autre source en bois. De nombreux utilisateurs laissent plusieurs arborescences dans des emplacements clés et ne bougent que les cames.</p>
<p>(1) Universal Camera Attachment (UCA) et élastique élastique</p>	 <p>Utilisé avec des caméras sans point d'attache inférieur 1\4- 20. Les caméras dépourvues de points d'attache peuvent être balisées.</p>

ASSEMBLÉE

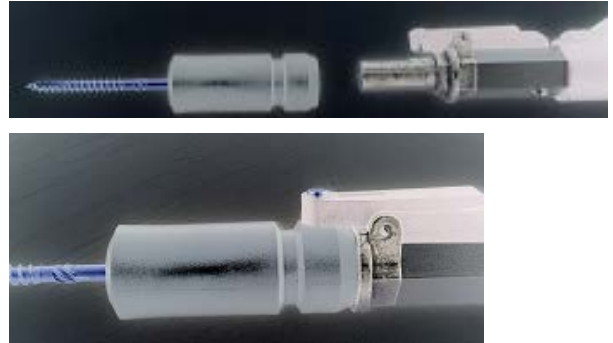
<p>ÉTAPE 1a <i>Cames avec point d'attache inférieur</i></p>	<p>Attacher l'appareil photo à la plate-forme</p> <p>Tournez la vis de l'appareil photo dans le sens des aiguilles d'une montre tout en tenant fermement l'appareil photo. Alignez l'objectif de la caméra avec le pointeur triangulaire avant pour centrer sur la plate-forme.</p> <p>REMARQUE: les caméras ne sont pas incluses dans l'emballage.</p> <p>Aller à l'ÉTAPE 2</p>		<p>Outil Recommandé</p> 
<p>ÉTAPE 1b</p>	<p>Fixez l'accessoire UCA (Universal Camera Attachment) sur la plate-forme de montage de la caméra</p> <p>Faites glisser l'UCM sur la plate-forme de montage de la caméra à l'arrière. Alignez la vis de l'appareil photo et tournez dans le sens des aiguilles d'une montre tout en maintenant fermement l'UCM.</p> <p>Assurez-vous que la vis à billes "T" est serrée mais réglable.</p> <p>Passez à l'étape 1C ou 1D</p>		<p>Outil Recommandé</p> 
<p>ÉTAPE 1c <i>Cames avec point d'attache arrière</i></p>	<p>Joindre la caméra à l'UCA</p> <p>Fixez la caméra à plat en contact avec le haut de la plate-forme de montage de la caméra et contre le long côté plat de l'UCA.</p> <p>Fixez la vis UCA à travers la fente du côté nervuré en tournant dans le sens des aiguilles d'une montre dans le trou de vis fileté de la caméra. Avant le serrage final, assurez-vous que l'objectif de la caméra est aligné avec le pointeur triangulaire situé au centre de la plate-forme de la caméra.</p> <p>Aller à l'ÉTAPE 2</p>		<p>Outil (s) recommandé (s)</p> 
<p>ÉTAPE 1d <i>Cams w / pas de point d'attache</i></p>	<p>Joindre la caméra à l'UCA</p> <p>Secure camera flat in contact with the top of the camera mounting platform & against the long flat side of UCA.</p> <p>Using bungee cords secure through mounting devices on rear of your camera. Ensure bungees are firm, avoid wrapping around the front of camera to avoid blocking the lens & line up camera lens with the triangular front point on the center of the camera platform. This may take some experimenting to fasten securely, however, most quality cameras are equipped with the bottom or rear threaded receptacle.</p> <p>Go to STEP 2</p>		<p>Outil Recommandé</p> 

INSTALLATION

ÉTAPE 2

Connectez l'adaptateur au poteau d'extension de votre choix et attachez l'attacheur d'arbre

Raccorder l'adaptateur en le vissant avec l'extrémité filetée à la rallonge de votre choix. Alignez l'arbre avec le poteau d'extension et assurez-vous qu'il s'enclenche sur le poteau dans l'un ou l'autre trou.



ÉTAPE 3 Montage de l'arbre

Connectez les pôles nécessaires et sélectionnez l'emplacement. Pour de meilleurs résultats, l'arbre doit être fixé à environ 45 degrés. Tourner le (s) poteau (s) dans le sens des aiguilles d'une montre, tordre les poteaux à la profondeur désirée. (au moins 3/4 du chemin dans l'arbre, en fonction de l'épaisseur de l'écorce et.

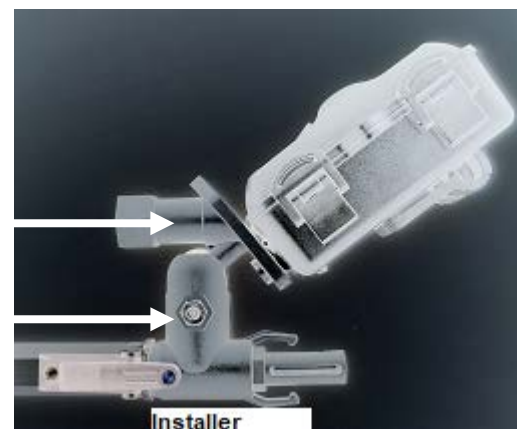


ÉTAPE 4

Connectez la perche d'extension à la caméra et à la plate-forme de montage de la caméra

Assurez-vous que la vis en «T» noire sur la rotule est bien serrée mais qu'elle permettra un réglage.

Fixez la rallonge à la caméra sur le côté marqué "INSTALL". Le côté "REMOVE" ne doit être utilisé que lors du retrait de la caméra du site. Positionnez le réglage de la caméra parallèlement au poteau d'extension comme indiqué par la flèche sur la droite.

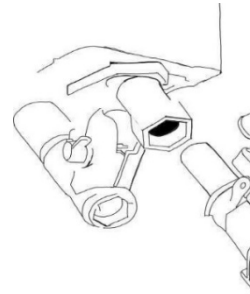


ÉTAPE
5**Installez la plate-forme de montage de la caméra et la caméra sur l'accessoire d'arbre**

Remarque: Veillez à activer les paramètres de l'appareil photo avant l'installation.
Étendre le (s) poteau (s) à la hauteur désirée.
Alignez et installez la plate-forme de montage de la caméra sur la fixation de l'arbre.
Tirez le (s) poteau (s) de rallonge (s) tout droit vers vous pour assurer un démontage en douceur.

**ÉTAPE****6****Ajuster la caméra**

Utilisez la perche d'extension de votre choix et insérez-la dans le port avant du support de caméra dans l'arbre pour déplacer la caméra et ajuster au but désiré.

**RÉCUPÉRATION DE CAMÉRA**

Extension de la ligne avec le clip vert marqué "REMOVE". Assurez-vous de cliquer sur la plate-forme de la caméra. Tirez droit vers l'arrière jusqu'à ce que la plate-forme de la caméra se libère.

** N'oubliez pas d'enlever votre pièce jointe!
OU

Obtenez des pièces jointes supplémentaires pour les arbres et gardez-les installés à vos endroits préférés!



Voir les informations de garantie sur le site Web:

www.spyhighmounts.com

**S'il vous plaît envoyez-nous quelques-unes de vos superbes photos et vidéos à afficher sur notre site!
Bonne chance grâce au système de montage Spy High ®!**



**SCAN AVEC VOTRE
SMARTPHONE!
VIDEO D'INSTRUCTION**
Sur Youtube
SYSTÈME COMPLET

**SCAN AVEC VOTRE SMARTPHONE!
ADAPTATEUR SET VIDEO (AVEC
PÔLES D'EXTENSION FOURNIS PAR
LE CLIENT)**



WARRANTY, DISCLAIMER

Introduction

The warranty obligations of Spy High, LLC ("Spy High®") for its products are limited to the terms set forth below:

Who is Covered

Only the original purchaser of this product is covered under this limited warranty. This limited warranty is not transferable to subsequent purchasers or owners of this product.

How Long Does this Coverage Last

This limited warranty (the Warranty Period) lasts for 60 days from the date of original purchase of this product. Proof of purchase date is required.

What is Covered

This limited warranty covers defects in materials and/or workmanship in this product. Replacement or repaired products are warranted as above only for the remainder of the original Warranty Period.

What is Not Covered

This limited warranty does not cover any damage, deterioration or malfunction resulting from any improper or unreasonable installation, alteration, modification, misuse, abuse, accident, neglect, exposure to excess moisture, fire, lightning, power surges, or other acts of nature. Nor does it cover removal or installation of this product, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by Spy High® to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product.

This limited warranty does not cover any installation mishaps, personal injury, damage to trees, structures, or any other property on which the product was installed, nor attached accessories of any kind, including but not limited to cameras. Warranty coverage is limited to repair or replacement of the product only. Any and all consequential and incidental damages are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Without limiting any other exclusion herein, Spy High® does not warrant that the product covered hereby will remain compatible with any other product or technology with which the product may be used.

This limited warranty does not cover any product purchased through non- authorized dealers. Receipts from non-authorized dealers are NOT acceptable for warranty verification.



What Spy High® Will Do

Spy High® will, at its sole option, provide one of the following remedies to whatever extent it shall deem necessary to satisfy a proper claim under this limited warranty:

1. Elect to repair any defective parts within a reasonable period of time, free of any charge to complete the repair and restore the product to its proper operating condition; or,
 2. Replace the product with a direct replacement or with a similar product, including a factory certified product, deemed by us to perform substantially the same function as the original product. Replacement products will be furnished only on an exchange basis.
- If you live in the United States, we will also pay the shipping costs necessary to return the product to you once the repair is complete.

What Spy High® Will Not Do

Under This Limited Warranty Products are to be sent prepaid to us. We also recommend that you insure the shipment. If the product is returned uninsured, you assume all risks of loss or damage during shipment. Spy High® will not be responsible for any costs or damages related to the removal or reinstallation of the product.

How to Obtain a Remedy Under This Limited Warranty

In order to pursue any remedy under this limited warranty, you must possess an original, dated receipt as proof of purchase from an authorized Spy High® reseller. If this product is returned under this limited warranty, a Return Authorization number (RA#), obtained from Spy High®, will be required. If it is decided that this product should be returned directly to Spy High®, this product should be properly packed and sent to:

Spy High Mounting System
P. O. Box 6455
Great Falls, MT 59406

The RA number should be clearly marked on the outside of the package. Returns arriving without an RA number on the outside, may result in loss to you of both the product(s) in the package as well as any applicable remedy you would have received under the limited warranty.

If You Reside Outside the United States

If you live outside the United States, warranty matters are handled by your local dealer. You should go to your local Authorized Dealer with your claim. Have a copy of the original proof of purchase. The authorized Spy High® dealer will validate the claim and call us direct to arrange for a Return Authorization number. They will handle your claim for you.

Limitation on Liability

THE MAXIMUM LIABILITY OF SPY HIGH® UNDER THIS LIMITED WARRANTY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY LAW, SPY HIGH® IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY.

Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

Exclusive Remedy

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. TO THE MAXIMUM EXTENT PERMITTED BY LAW, ROWE ELECTRONICS SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF SPY HIGH™ CANNOT LAWFULLY DISCLAIM OR EXCLUDE IMPLIED WARRANTIES UNDER APPLICABLE LAW, THEN ALL IMPLIED WARRANTIES COVERING THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY TO THIS PRODUCT AS PROVIDED UNDER APPLICABLE LAW.

IF ANY PRODUCT TO WHICH THIS LIMITED WARRANTY APPLIES IS A "CONSUMER PRODUCT" UNDER THE MAGNUSON-MOSS WARRANTY ACT (15 U.S.C.A. §2301, ET SEQ.) OR OTHER APPLICABLE LAW, THE FOREGOING DISCLAIMER OF IMPLIED WARRANTIES SHALL NOT APPLY TO YOU, AND ALL IMPLIED WARRANTIES ON THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR THE PARTICULAR PURPOSE, SHALL APPLY AS PROVIDED UNDER APPLICABLE LAW.

Other Conditions

This limited warranty gives you specific legal rights, and you may have other rights which vary from country to country or state to state. This limited warranty is void if the label bearing the UPC number of this product has been removed or defaced.